


A

No.	Código	Clave	Descripción
1	920997	R1-COMP-120LH	Tornillo M6x45
2	920998	R2-COMP-120LH	Rondana de presión 6
3	920999	R3-COMP-120LH	Conector angular triple
4	921000	R4-COMP-120LH	Tapa de cilindro
5	921001	R5-COMP-120LH	Junta tapa de cilindro
6	921002	R6-COMP-120LH	Placa de válvula
7	921003	R7-COMP-120LH	Válvula
8	921004	R8-COMP-120LH	Junta
9	921005	R9-COMP-120LH	Junta de válvula
10	921006	R10-COMP-120LH	Cilindro
11	921007	R11-COMP-120LH	Junta de cilindro
12	921008	R12-COMP-120LH	Anillo de pistón
13	921009	R13-COMP-120LH	Anillo de aceite
14	921010	R14-COMP-120LH	Pistón
15	921011	R15-COMP-120LH	Perno de pistón
16	921012	R16-COMP-120LH	Biela
17	921013	R17-COMP-120LH	Tapón de aceite
18	921014	R18-COMP-120LH	Tapón de aceite
20	921016	R20-COMP-120LH	Conector de descarga
21	921017	R21-COMP-120LH	Nivel de aceite
22	921018	R22-COMP-120LH	Tornillo de drenaje
23	921019	R23-COMP-120LH	Tuerca M8
24	921020	R24-COMP-120LH	Rondana de presión 8
24.1	921192	R24.1-COMP-240LH	Arandela
25	921021	R25-COMP-120LH	Birlo 8x33
26	921022	R26-COMP-120LH	Balero 6204-2RS
28	921023	R28-COMP-120LH	Cigüeñal
28	921024	R28-COMP-120LH	Balero 6205-2RS
29	921025	R29-COMP-120LH	Sello de aceite
30	921026	R30-COMP-120LH	Soporte de guarda
31	921027	R31-COMP-120LH	Soporte de balero
19.1	906901	19.1-COMP-60LB	Junta de caja de cigüeñal
32	921028	R32-COMP-120LH	Tornillo M8x25
33	921029	R33-COMP-120LH	Arandela 10
33.1	921030	R33.1-COMP-120LH	Rondana de presión 10
34	921031	R34-COMP-120LH	Tuerca M10
35	921032	R35-COMP-120LH	Motor
35.1	921033	R35.1-COMP-120LH	Caja de conexiones
36	921041	R36-COMP-120LH	Capacitor de arranque
37	921042	R37-COMP-120LH	Capacitor de operación
38	921043	R38-COMP-120LH	Cubierta de descarga

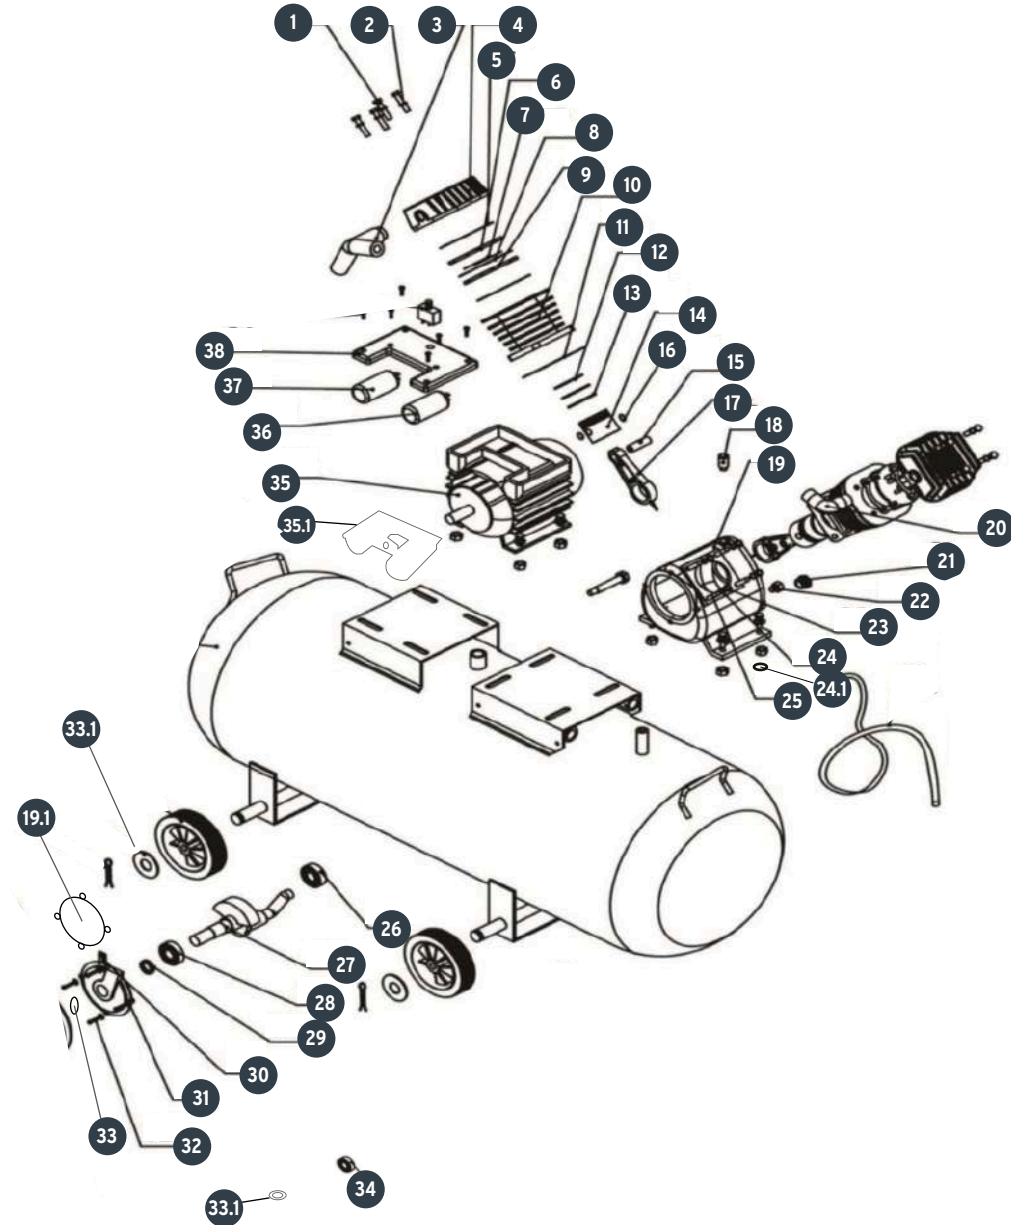

A

B

B

No.	Código	Clave	Descripción
39	921044	R39-COMP-120LH	Tornillo St 3.9x16
40	921045	R40-COMP-120LH	Protector de sobrecarga
41	921046	R41-COMP-120LH	Tubo de descarga
42	921047	R42-COMP-120LH	Válvula de antiretorno
43	921048	R43-COMP-120LH	Coenctor de ángulo derecho 1/8
44	921049	R44-COMP-120LH	Tubo de alivio
45	921050	R45-COMP-120LH	Tanque
46	921051	R46-COMP-120LH	Rueda
47	921052	R47-COMP-120LH	Polea de motor
47.1	921842	R47.1-COMP-240LH	Cuña
48	906941	R48-COMP-60LB	Perno especial
49	921053	R49-COMP-120LH	Arandela 8
50	921054	R50-COMP-120LH	Tornillo M8x30
51	921055	R51-COMP-120LH	Tornillo M5x35
52	921056	R52-COMP-120LH	Arandela 5
52.1	921848	R51.1-COMP-240LH	Tuerca M5
53	921057	R53-COMP-120LH	Espaciador de plástico
54	921058	R54-COMP-120LH	Guarda
55	921059	R55-COMP-120LH	Banda
56	921060	R56-COMP-120LH	Polea
57	921061	R57-COMP-120LH	Drenaje
58	921919	R55-COMP-240LV	Pata
58.1	921917	R53-COMP-240LV	Tuerca M8
58.2	921152	R55.2-COMP-120LH	Arandela
58.3	921920	R55.1-COMP-240LV	Tornillo M8x30
59	926959	R56-COMP-60LB	Agarradera
60	926960	R57-COMP-60LB	Prisionero M8x8
61	921062	R61-COMP-120LH	Cable
62	921063	R62-COMP-120LH	Tuerca 1/2"
63	921064	R63-COMP-120LH	Válvula reguladora
64	921065	R64-COMP-120LH	Válvula de salida
65	921066	R65-COMP-120LH	Válvula de seguridad
66	921067	R66-COMP-120LH	Manómetro
67	921068	R67-COMP-120LH	Presostato
68	921069	R68-COMP-120LH	Filtro de aire
69	921070	R69-COMP-120LH	Tubo conector
70	921071	R70-COMP-120LH	Cable

