

No.	Código	Clave	Descripción
1	918563	R1-CALA-P3	Tornillo
1.1	918564	R1.1-CALA-P3	Tornillo
1.2	918565	R1.2-CALA-P3	Tornillo
2	918566	R2-CALA-P3	Carcasa derecha
3	918567	R3-CALA-P3	Zapata
4	918568	R4-CALA-P3	Bloque seguro
5	918569	R5-CALA-P3	Tornillo allen
7	918570	R7-CALA-P3	Estribo de sujeción inferior
8	918571	R8-CALA-P3	Tornillo allen
9	918572	R9-CALA-P3	Porta segueta
10	918573	R10-CALA-P3	Eje porta segueta
10.1	918574	R10.1-CALA-P3	Soporte protector antipolvo
10.2	918575	R10.2-CALA-P3	Protector antipolvo
11	918576	R11-CALA-P3	Estribo de sujeción superior
12	918577	R12-CALA-P3	Rodillo
13	918578	R13-CALA-P3	Engrane
14	918579	R14-CALA-P3	Soporte rodillo
15	918580	R15-CALA-P3	Buje de engrane
16	918581	R16-CALA-P3	Soporte central
17	918582	R17-CALA-P3	Balero 608RS
18	918583	R18-CALA-P3	Armadura
19	918584	R19-CALA-P3	Porta carbón
19.1	918585	R19.1-CALA-P3	Tapa porta carbón
20	918586	R20-CALA-P3	Carbón
22	918587	R22-CALA-P3	Balero de bolas 607ZZ
23	918588	R23-CALA-P3	Campo
25	918589	R25-CALA-P3	Protector de cable
26	918590	R26-CALA-P3	Cable de alimentación
27	918591	R27-CALA-P3	Colector de polvo
29	918592	R29-CALA-P3	Interruptor
30	918593	R30-CALA-P3	Tornillo
31	918594	R31-CALA-P3	Opresor de cable
32	918595	R32-CALA-P3	Carcasa izquierda
33	918596	R33-CALA-P3	Guarda protectora

