

| No. | Código | Clave | Descripción |
|------|--------|--------------|--------------------------------------|
| 1 | 902698 | R1-GAT-12T | Vástago ensamblado 12 Ton. |
| 2 | 951033 | R2-GAT-12 | Sello limpiador de vástago |
| 3 | 902700 | R3-GAT-12T | Empaque (38x44x3.5) |
| 4 | 902701 | R4-GAT-12T | Cilindro |
| 5 | 951034 | R5-GAT-12 | Junta -H-E |
| 6 | 951035 | R6-GAT-12 | Balín Ø6 |
| 7 | 951036 | R7-GAT-12 | Filtro |
| 8 | 951037 | R8-GAT-12 | Arandela |
| 9 | 951038 | R9-GAT-12 | Bomba de cilindro |
| 10 | 951039 | R10-GAT-12 | Empaque (8x12x2) |
| 11 | 951040 | R11-GAT-12 | Empaque |
| 12 | 951041 | R12-GAT-12 | Ensamble de actuador, brazo y pivote |
| 14 | 951042 | R14-GAT-12 | Chaveta |
| 15 | 951043 | R15-GAT-12 | Perno (7x26) |
| 16 | 951044 | R16-GAT-12 | Empaque (43x49x3) |
| 17 | 902704 | R17-GAT-12T | Tuerca 12 Ton. |
| 18 | 902705 | R18-GAT-12T | Junta |
| 19 | 951045 | R19-GAT-12 | Depósito gato de botella 12 Ton. |
| 20 | 902707 | R20-GAT-12T | Junta -E |
| 21 | 951046 | R21-GAT-12 | Base gato de botella 12 Ton. |
| 22 | 951047 | R22-GAT-12 | Válvula de liberador |
| 22.1 | 951048 | R22.1-GAT-12 | Empaque (6x12x3) |
| 23 | 902657 | R23-GAT-12T | Tapón de llenado |
| 24 | ACC | | Palanca gat-12 Ton. |
| 25 | ACC | | Extensión palanca 12 Ton. |
| 26 | 951049 | R26-GAT-12 | Seguro de balín |

