


A

No.	Código	Clave	Descripción
1	931137	R1-ENNE-160	Tornillo M8x20
2	931138	R2-ENNE-160	Buje de escape
3	931139	R3-ENNE-160	Escape de aire
4	931140	R4-ENNE-160	Sello 11.7x2.5
5	931141	R5-ENNE-1160	Tornillo M6x25
6	931142	R6-ENNE-160	Arandela de presión Ø6
7	931143	R7-ENNE-160	Tapa cilíndrica
8	931144	R8-ENNE-160	Junta de cilindro
9	931145	R9-ENNE-160	Separador de escape Ø38
10	931146	R10-ENNE-160	Paro de pistón
11	931147	R11-ENNE-160	Resorte de compresión
12	931148	R12-ENNE-160	Separador Ø22
13	931149	R13-ENNE-160	Sello 42.2x2.6
14	931150	R14-ENNE-160	Válvula de pistón
15	931151	R15-ENNE-160	Sello 50x2.54
16	931152	R16-ENNE-160	Sello 42.2x3.49
17	931153	R17-ENNE-160	Pistón
18	931154	R18-ENNE-160	Collarín de soporte
19	931155	R19-ENNE-160	Sello 78x2.82
20	931156	R20-ENNE-160	Sello cilíndrico
21	931157	R21-ENNE-160	Sello 54.7x2.6
22	931158	R22-ENNE-160	Cilindro
23	931159	R23-ENNE-160	Sello 52x2.5
24	931160	R24-ENNE-160	Tope
25	931161	R25-ENNE-160	Conector de entrada de aire
26	931162	R26-ENNE-160	Tornillo M5x20
27	931163	R27-ENNE-160	Arandela de presión Ø5
28	931164	R28-ENNE-160	Tapa final
29	931165	R29-ENNE-160	Junta de tapa
30	931166	R30-ENNE-160	Mango

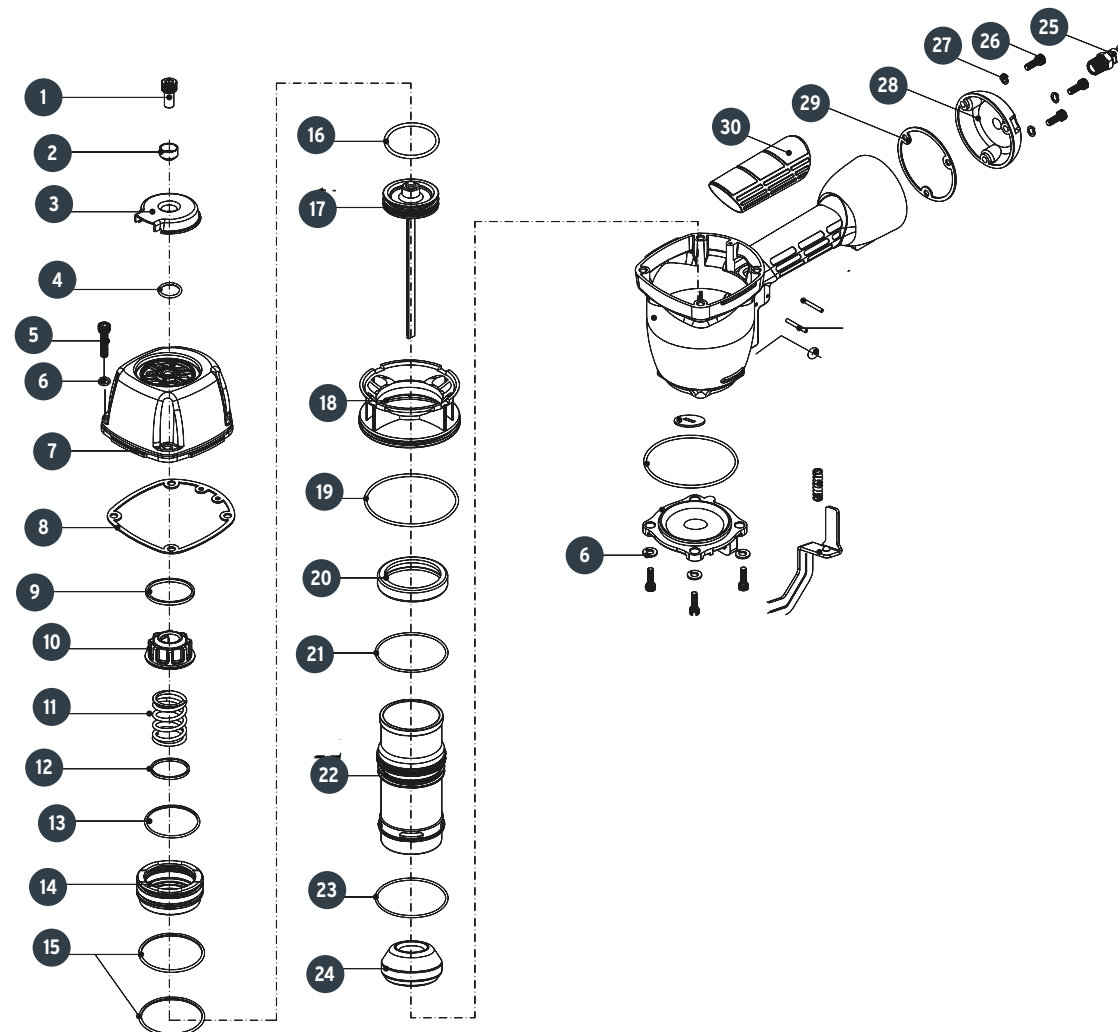


A



B

No.	Código	Clave	Descripción
31	931167	R31-ENNE-160	Cuerpo
32	931168	R32-ENNE-160	Boquilla
33	931169	R33-ENNE-160	Sello 50x1.9
34	931170	R34-ENNE-160	Guía de controlador
35	931171	R34.1-ENNE-160	Tornillo M6x25
36	931172	R36-ENNE-160	Sello 1.2x1.9
37	931173	R37-ENNE-160	Brazo de contacto
38	931174	R38-ENNE-160	Perno 3x30.5
39	931175	R39-ENNE-160	Perno 2.5x30
40	931176	R40-ENNE-160	Perno 3x23
41	931177	R41-ENNE-160	Perno 3x30
42	931178	R42-ENNE-160	Tornillo M5x16
43	931178	R43-ENNE-160	Tuerca M5
44	931180	R44-ENNE-160	Sello 15.2x1.9
45	931181	R45-ENNE-160	Espaciador
46	931182	R46-ENNE-160	Sello 11.5x2
47	931183	R47-ENNE-160	Sello 6.8x1.9
48	931184	R48-ENNE-160	Sello 5.7x2
49	931185	R49-ENNE-160	Válvula de piloto
50	931186	R50-ENNE-160	Sello 8.5x2
51	9311887	R51-ENNE-160	Perno
52	931188	R52-ENNE-160	Carcasa de válvula de disparo
53	931189	R53-ENNE-160	Sello 19.8x2.4
54	931190	R54-ENNE-160	Sello 2.5x1.4
55	931191	R55-ENNE-160	Resorte

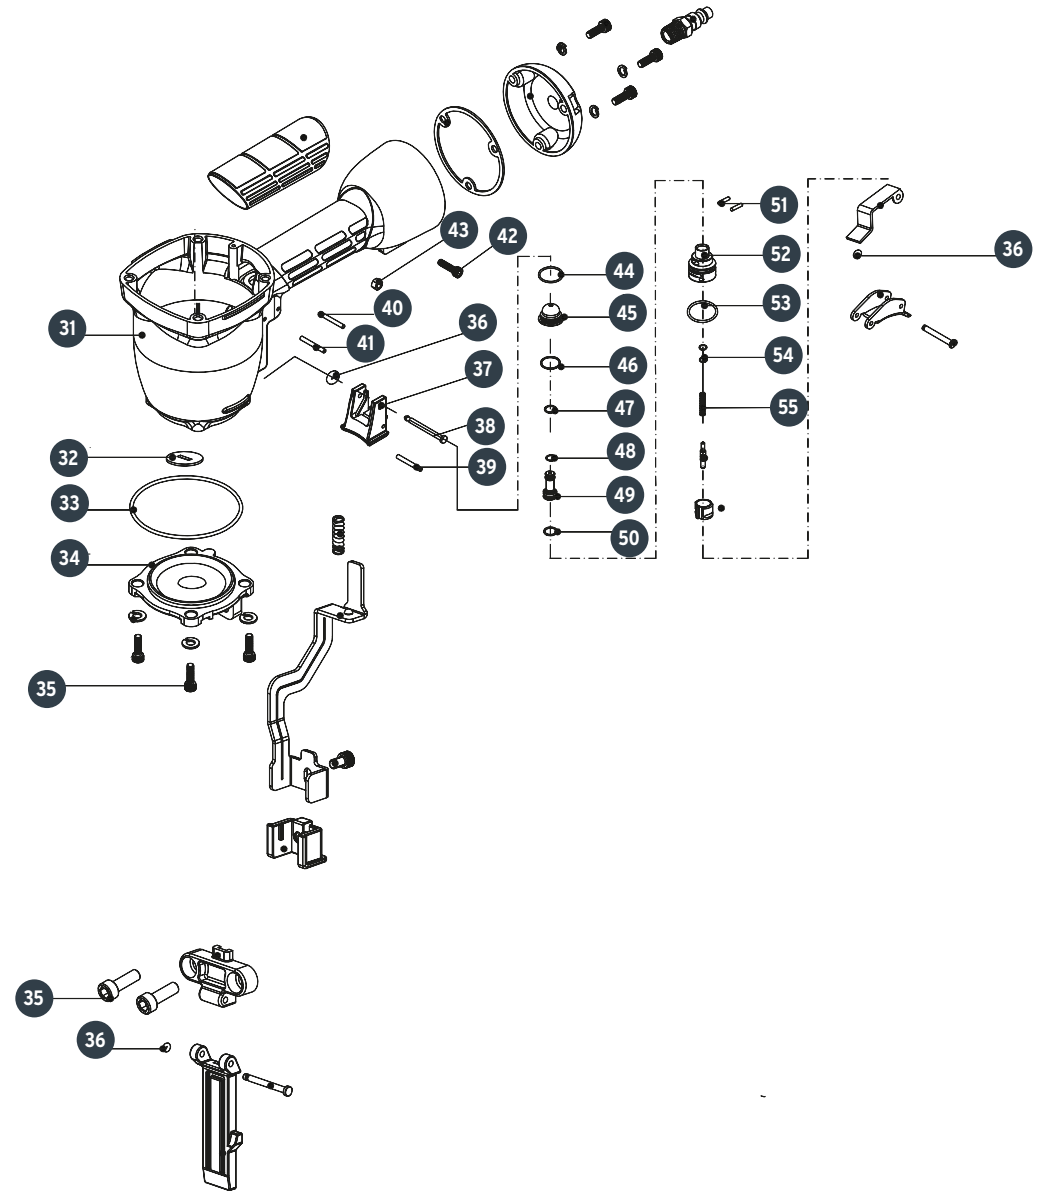

B

C

C



No.	Código	Clave	Descripción
56	931192	R56-ENNE-160	Vástago de válvula de gatillo
57	931193	R57-ENNE-160	Tapa de válvula
58	931194	R58-ENNE-160	Palanca de contacto
59	931195	R59-ENNE-160	Gatillo
60	931196	R60-ENNE-160	Perno 3x20
61	931197	R61-ENNE-160	Resorte
62	931198	R62-ENNE-160	Brazo de contacto
63	931199	R63-ENNE-160	Punta de no marcado
64	931200	R64-ENNE-160	Espaciador
65	931201	R65-ENNE-160	Perno 3x26
66	931202	R66-ENNE-160	Cubierta guía
67	931203	R67-ENNE-160	Guía de expulsión
68	931204	R68-ENNE-160	Tornillo M4x10
69	931205	R69-ENNE-160	Tornillo M5x12
70	931206	R70-ENNE-160	Cubierta de brazo
71	931207	R71-ENNE-160	Brazo de contacto
72	931208	R72-ENNE-160	Resorte
73	931209	R73-ENNE-160	Soporte de cargador
74	931210	R74-ENNE-160	Percha de cargador
75	931211	R75-ENNE-160	Cargador fijo
76	931212	R76-ENNE-160	Resorte en cinta
77	931213	R77-ENNE-160	Tornillo M4x4
78	931214	R78-ENNE-160	Propulsor
79	931215	R79-ENNE-160	Resorte
80	931216	R80-ENNE-160	Gatillo
81	931217	R81-ENNE-160	Tornillo M6x16

