


Manual

Pneumatic stapler

Applies for:

Code	Model
13177	ENNE-70

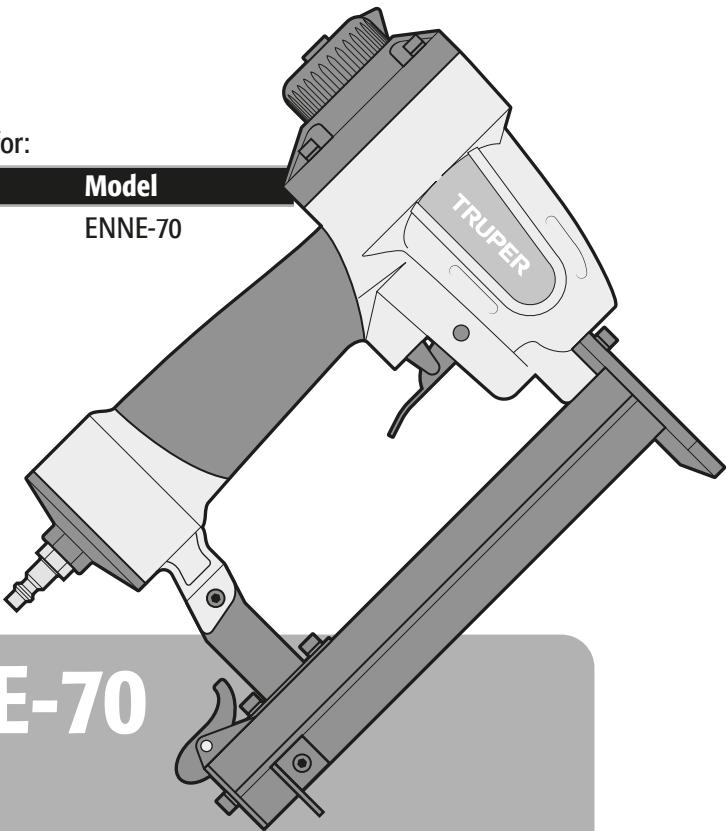

ENNE-70



WARNING

Constant lubrication.



CAUTION



Read this manual thoroughly
before using the tool.



Technical data	3
Filter and lubrication requirements	3
 Safety warnings for pneumatic tools	4
 Risk control when using pneumatic tools	5
 Safety warnings for using air staplers	6
Parts	7
Setup	7
Start up	8
Maintenance	9
Troubleshooting	9
Notes	10
Authorized service centers	11
Warranty policy	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

Use and care recommendations



 Do not operate without lubrication (it is recommended to use the Truper lubricating filter **19238** UNI-LL-1/4).



 Use only in **WOOD**.



 Work at the **INDICATED PRESSURE** to prevent staples from clogging. In case this happens **REMOVE THE STAPLE** before continuing working.

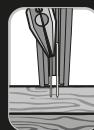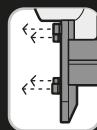

 Perform periodic **MAINTENANCE** to your machine (page 9).

ENNE-70


Code	•	13177
Description	•	Pneumatic stapler
Recommended operation pressure	•	75 PSI- 110 PSI
Maximum pressure allowed	•	110 PSI
Cartridge capacity	•	100 staples
Staple gauge	•	22
Staple Crown	•	3/8"
Staple length	•	1/4" to 5/8"
Air intake connection	•	1/4 NPT
Hose inner diameter	•	3/8"

CAUTION An increase in the pressure in the line or the inner diameter in the hose diameter shall be considered to compensate the use of very long hoses (longer than 26.2 ft). The hose minimum inner diameter shall be 3/8" and the connectors shall be 1/4 NPT. Use good quality couplings and accessories with the right size.

Filter and lubrication requirements

CAUTION Dust, water and oil specific for using in pneumatic tools are the main cause of potential flaws with the tool. We recommend installing a  **TRUPER®** Brand UNI-LL-1/4 centralized filter-oil feeder system. This system assures lubrication reducing 80% oil consumption significantly increasing the air quality the operator breaths.

- The filter-oil feeder system must be regulated to administer 3 to 6 drops a minute.
- Drain the water in the air compressor tank and also condensation in the hoses before using the tool. Consult the air compressor instructions.

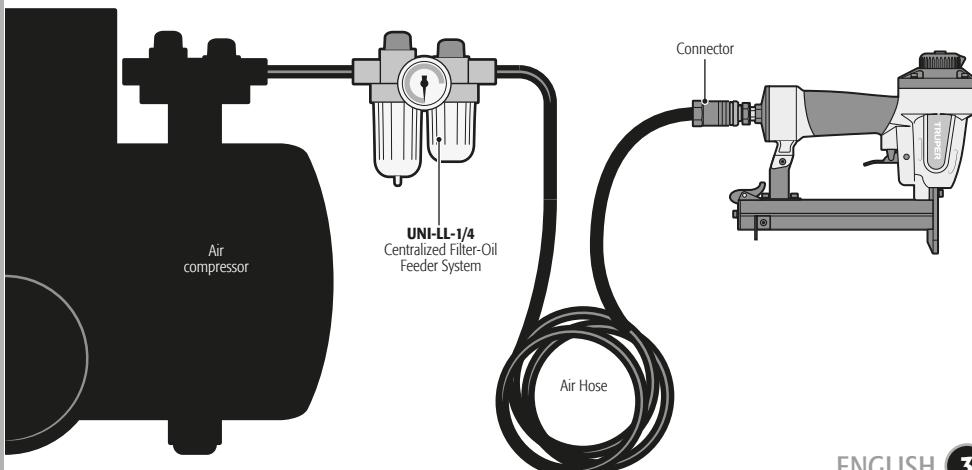



Safety warnings for pneumatic tools



Keep your work area clean, tidy and well lit.

CAUTION Cluttered and dark areas can cause accidents.



Never use the tool in explosive environments or in the presence of flammable liquids or with no ventilation.

DANGER Sparks generated by the tool could cause explosion or fire.



Keep children and other people at a safe distance while using the tool.

WARNING Distractions can make loose control and cause accidents.



Avoid making contact with power lines and circuits.

DANGER Place an avoid power lines and circuits especially hidden wiring including grounded objects.



Stay alert, be cautious and use common sense.

CAUTION Familiarity with the use of the tool could distract you while operating it. This can cause accidents.

Do not use the tool if tired or under the influence of drugs, alcohol or medication.

DANGER A moment distraction while using the tool can cause severe personal injury.

Use the tool with its pieces in place and in good repair.

WARNING Failure to comply with this instruction can expose you to severe injury.

Secure and support correctly the work piece.

CAUTION Use vices and a stable work surface.

Never force the tool.

CAUTION Working within the tool design range assures a better and safer job.



Store the tool in a safe place away from children reach.

WARNING Pneumatic tools are dangerous in inexperienced hands.



Wear the right clothing.

WARNING Loose clothing, jewelry or long hair can get caught in the moving parts.



Keep hands away from the moving and / or rotating parts.

WARNING Failure to comply with this warning expose you to severe personal injury such as cuts, burns and crushing.



Wear the adequate personal protection equipment.

CAUTION Use of eye protection, dust mask, anti-squid safety shoes, and protection helmet and safety gloves considerably reduce risk of injuries.



Disconnect the air hose from the tool before servicing or changing accessories.

CAUTION To prevent the tool from accidentally start and cause accidents.

Never use the tool if the switch is not working or if it is not correctly assembled.

WARNING Using the tool in disrepair expose you to severe personal injury. Repair immediately in a **TRUPER** Authorized Service Center.

Do not overreach.

WARNING Good footing and balance allow having better control on the tool in unexpected situations.

Never pull the air hose.

CAUTION Do not use the hose to carry the tool or disconnect it from the air supply. Damaged or tangled hoses may burst and shoot residues towards the operator.



Prevent accidentally starting of the tool.

WARNING Double check the air intake is disconnected before lubricating, setting accessories or servicing the tool.



Remove all the vices before starting the tool.

WARNING Additional tools, or vices set onto a rotating piece in the tool may cause severe personal injury.



Service the tool and verify it is in excellent conditions before using it.

DANGER Double-check carefully all the mobile parts, alignment and assembly. Do this inspection regularly. Look for any damaged element or malfunctioning part. Replace immediately in a **TRUPER** Authorized Service Center.

Accessories.

CAUTION Use only accessories or spare parts indicated in this MANUAL or certified by **TRUPER**.

Never leave the tool running unattended.

CAUTION Disconnect the tool from the air supply after operating and before storing in a safe place to prevent accidents.

Risk control when using pneumatic tools



Injury risk to head and eyes



⚠ WARNING • Compressed air used with pneumatic tools may be dangerous. Objects like vices, burr, splinters, dust and other residues can get shot out at great speed driven by the airflow and enter your eyes or hit your head. Airflow by itself can cause damage on soft tissues in eyes, ears, etc.

⚠ CAUTION • The tool attachments may come free or break, sending debris towards the operator or those working nearby.

Risk of explosion



⚠ WARNING • Inadequate handling of pressure in pneumatic equipment may cause an explosion and severe injury. Also, using any gas different from compressed air causes explosions.

Hearing loss risk

Preventing an explosion



- Before using the tools double-check that the compressed air supply is regulated to the tool specified pressure and it does not go over that level.
- Never connect the tool into a pressure supply exceeding 200 PSI, neither oxygen nor any other bottled gas, combustible or reactive.
- Use clean, dry and regulated compressed air with pressure between 75 PSI and 110 PSI.

Risk of injury



⚠ WARNING • Damaged hoses may burst and cause severe injury or hearing loss.

Preventing hearing loss

⚠ WARNING • Being exposed to noise generated by pneumatic tool during long periods of time may damage permanently hearing and cause hearing loss.



Preventing injuries

- Do not mistreat the hose or connectors.
- Keep the hose away from sharp or abrasive surfaces.
- Disconnect the hose when loading the cartridge.
- Never use the hose to carry the tool.
- Never pull the hose to disconnect the tool.
- Do not expose the hose to heat, oil or solvents.
- Before operating the tool, verify that the hoses are not damaged.
- Use hoses that can handle at least 150 PSI or 150% of the system maximum pressure, whichever is higher.

• Vices can get unfastened and get projected causing severe injury or damage to property.

• Double-check all connections are securely installed.

• Tools that start unexpectedly may cause severe injury.

• Never carry the tool by the trigger.
• Disconnect the tool air hose when not in use.
• Never leave the tool unattended when connected to the air supply.

• Tools and accessories with no maintenance may cause severe injury.

• Keep all tools clean. A clean and lubricated tool works more effectively and is easier to control.
• All repairs can only be carried out in a **TRUPER** Authorized Service Center.

• Damaged and banged tools and accessories may cause severe injury.

• Do not use damaged or banged tools or accessories.

Before using the stapler


- To prevent possible injuries, the operator and any other person in the work area shall wear safety glasses with side protection as well as protective helmets in compliance with the Official Mexican Standards (NOM).
- Inspect the tool. Never operate a tool if the lock, the trigger or the springs are not operating; are damaged or lost. Do not make any modification to the lock, trigger or springs.

While using the stapler

- To prevent accidental shots keep your fingers away from the trigger when the tool is nor been used.
- Do not point the tool towards your body, people or animals.
- Disconnect the tool from the air supply before loading staples. Thus, preventing a staple will accidentally be shot during the connection process.
- Do not try to insert a staple on the edge or near the edge of the work piece. If the piece breaks or separates, it would shoot the staples with enough power to cause injury.
- Shoot staples only towards the work surface. Never shoot towards surfaces hard to penetrate on top of another staple or having the tool in steep angle. This could make the staples to bounce exposing the operator to severe injury.
- Do not try to load staples when the trigger is pressed. This action shoots a staple unexpectedly.
- When moving the tool, only hold it by the handle. Never activate the trigger while moving. Never carry the tool holding it by the hose or pulling the hose to move the tool.

After using the stapler


- Disconnect the stapler from the air supply before carrying out any maintenance or unblocking job when leaving the work area or if giving it to another operator.

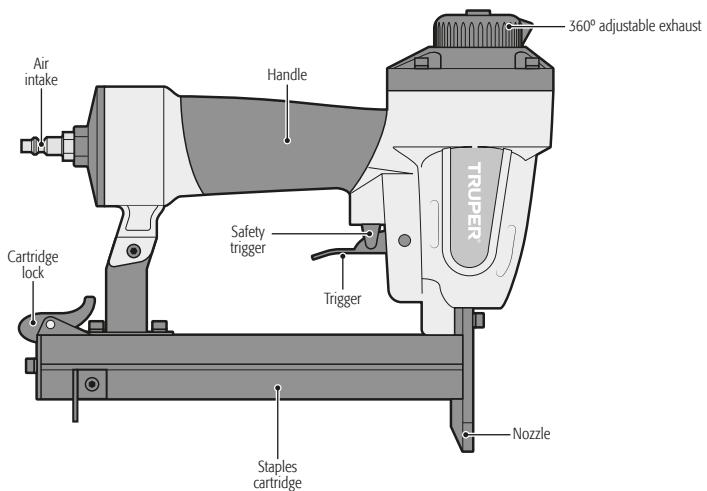

Setup

Air Supply Connection


- Before connecting to the tool, connect the hose to the compressor and let some air run through the hose and coupling, to verify both are clean.
- If a filter-oil feeder similar to the one recommended in page 3 is not available apply a few drops of oil suitable for tools into the air inlet (A).
- Connect the air hose to the tool with an empty cartridge using a fast coupling (B). **CAUTION** Before connecting the hose to the tool double check the staple cartridge is empty.
- The fast coupling is very useful to quickly connect and disconnect the tool and interchange them easily.

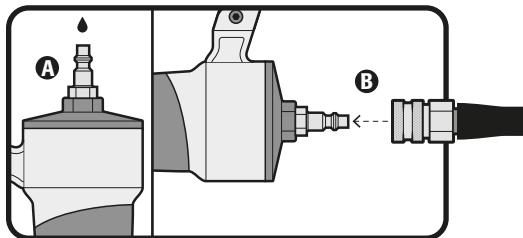

Cartridge Loading

- Disconnect the air hose from the tool.
- Verify that there are no staples stuck in the cartridge.
- Open the stapler's cartridge pressing the cartridge lock (C) and pulling backwards the cartridge cap (D).
- Place the staples onto the open cartridge rib and push them forward as indicated in the illustration.
- Set the staples onto the cartridge rib with the legs downwards.

CAUTION Double check the staples are not dirty or damaged.
• Close the cartridge pushing the cover. Block it with the cartridge lock.

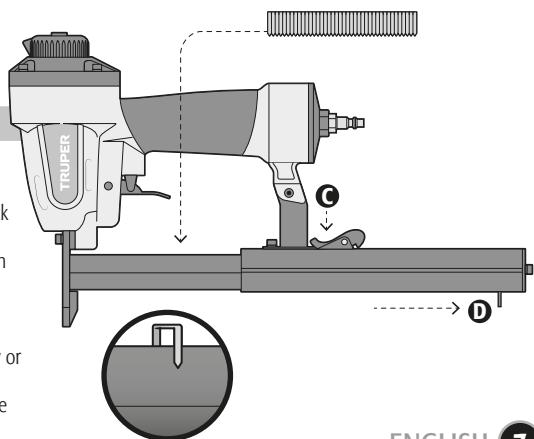

Operation


- Turn on the compressor and fill it.
- Regulate the air compressor output pressure to 75 PSI and 110 PSI
- ⚠ WARNING** The tool operates with this pressure range. If operating with a higher pressure ranges the useful life of the tool will be decreased.
- Load the cartridge as indicated on page 7.

⚠ CAUTION • Use a piece of scrap wood to verify the tool works correctly.

- Not putting your finger on the trigger position the tool and press the contact lock against the surface to be used (**A**).
- Without lifting the tool press the trigger to shoot (**B**).
- Immediately release the trigger and lift the tool (**C**).
- Position the tool back for subsequent shots.
- In case the staples are not penetrating deep enough, slightly lift the air pressure until reaching the right penetration force.


⚠ WARNING Remember not to exceed 110 PSI

⚠ CAUTION Be sure to set the safety lock so that the trigger of the tool is locked.

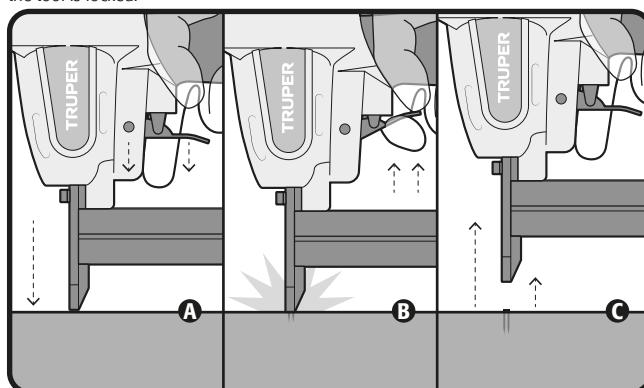


Blocked staple in the shooting orifice

- Disconnect the tool from the air supply.
- Open the nozzle (**D**) and pull the staple using pliers until removed (**E**).

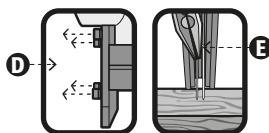

Blocked staple in the cartridge

- Disconnect the tool from the air supply.
- Open the cartridge (**F**).
- Remove the blocked staple with pliers.
- Close the cartridge.

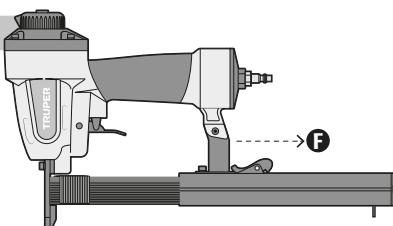

Lubrication

- Pneumatic tools require constant lubrication all along their working life and while operating. The compressed air the tool needs to function contains humidity that can oxidize the tool's motor and bearings.
To prevent that possibility it is necessary to constantly administer lubricating oil delivered by a **TRUPER®** Brand UNI-LL-1/4 centralized filter-oil feeder system installed between the air compressor and the tool.

- WARNING** • The exhaust immediately expels any excess oil in the motor. Always keep the exhaust free of obstructions and never point it to people or objects.
- If the tool is not going to be used long periods of time it should be carefully lubricated.
 - After each 60 hours operation the tool mechanism needs greasing. Keep in mind that grease in excess may diminish power

Service

- Servicing the tool shall be carried out every 3 months in a **TRUPER®** Authorized Service Center.
Maintenance service carried out by a non-qualified person may be dangerous and cause personal injury. It also makes the Warranty void.

- Problems with the tool due to lack of recommended dosed lubrication, to fail in following instructions given in this MANUAL or repairs carried out by personnel not certified by **TRUPER®** will not be covered in the Warranty. We reserve the right to make technical improvements without previous notice.

Troubleshooting

Problem

Air leak in the upper side of the tool or in the trigger area.

Cause

- Loose screws.
- Worn "O"-rings or damaged seals.

The tool is not operating or goes to slow.

Solution

- Fasten all the screws.
- Go to a **TRUPER®** Authorized Service Center to replace the parts.

Leak in the lower side of the tool.

- Regulate the air feeding pressure.
- Lubricate following instructions indicated in this manual.
- Go to a **TRUPER®** Authorized Service Center to replace the parts.

The tool gets blocked frequently.

- Fasten all the screws.
- Go to a **TRUPER®** Authorized Service Center to replace the parts.


Other problems.

- Wrong staples.
- Damaged staples.
- Loose cartridge or nozzle screw.
- Dirty cartridge.
- The shooting mechanism is damaged or worn.

- Check the staples have the right size.
- Replace with staplers in good repair.
- Fasten the screws.
- Clean the cartridge.
- Go to a **TRUPER®** Authorized Service Center to replace the parts.

- Diverse reasons.

- Go to a **TRUPER®** Authorized Service Center to replace the parts.

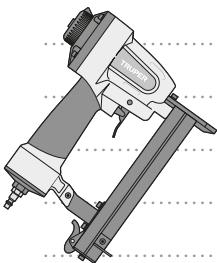

In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers 800 690-6990 or 800-018-7873 to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115
CAMPECHE	TORILLERÍA Y FERRETERÍA AAA AV. ÁLVARO OBREGÓN #324, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL.: 614 454 0052
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL: 871 209 68 23
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013
DURANGO	TORILLOS ÁGUILA, S.A. DE C.V. MAZIRIO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793
HIDALGO	FERREPRESOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL. TEL.: 33 3606 5285 AL 90
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858

MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL: 311 258 0540
NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL: 222 282 8282 / 84 / 85 / 86
QUERÉTARO	ARU HERRAMIENTAS S.A. DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL: 427 268 4544
QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRIGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL . BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMAN, C.P. 97390, MÉRIDA, YUC. TEL: 999 912 2451

Code**Model****Brand**

13177

ENNE-70

 **TRUPER®**

Warranty. Duration: 2 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by Truper®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. . Phone number **800-018-7873**. Made in China. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.

**2** YEARS

Stamp of the business. Delivery date:

Sellos del establecimiento comercial. Ficha de entrega:

• TRUPER

ENNE-70

1377

Marcia


Codiggo Modello Marca


**garantía
Poliza de**

TRUPER®

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá un listado actualizado, o llame al: **800-690-6990** u **800-018-7873** donde le informarán cuál es el Centro de Servicio más cercano.


AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN	CARRILLERA Y FERRETERÍA AAA	CAMPACHE	FIX FERRETERÍAS	PUEBLA	SUCURSAL PUEBLA	OAXACA	FIX FERRETERÍAS	QUINTANA ROO	FIX FERRETERÍAS	SINALOA	SUCURSAL SINALOA	SONORA	TABASCO	TAMAULIPAS	TRASCA	TlAXCALA	VERACRUZ	YUCATÁN	SUCURSAL MÉRIDA	MICHOCÁN	
CAMPACHE	CARRILLERA Y FERRETERÍA AAA	CAMPACHE	CARRILLERA Y FERRETERÍA AAA	CARRILLERA Y FERRETERÍA AAA	CARRILLERA Y FERRETERÍA AAA																	
CALIFORNIA	DE TODO PARA LA CONSTRUCCIÓN	CARRILLERA Y FERRETERÍA AAA																				
COAHUILA	ESTADO DE MÉJICO																					
COLIMA	BOMBA Y MOTORES BOMBA Y MOTORES																					
DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO	DURANGO		
GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	GUANAJAUTA	
HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	HIDRORE	
JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	JALISCO	
MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	MÉJICO	
MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	MICHOACÁN	
NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	NAYARIT	
NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN	NUEVO LEÓN		
PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	PUEBLA	
QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	QUERÉTARO	
SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	SAN LUIS POTOSÍ	
SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	SINALOA	
TABASCO	TABASCO	TABASCO	TABASCO																			

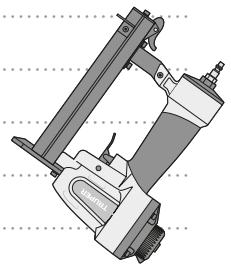

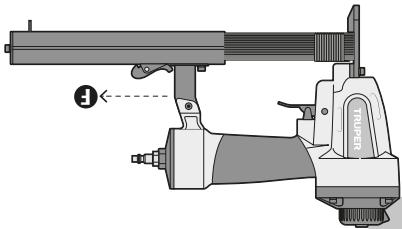


- Descubre la herramienta del suministro de aire.
 - Abra el cartucho (F).
 - Remueva la grapa atascada con unas pinzas.
 - Cierre el cartucho.

Grapa atorada en el cartucho

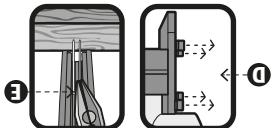

- Deseconecte la herramienta del suministro de aire.
 - Abra la boquilla (D) y jale la grapa con unas pinzas hasta removérla (E).

Grapa atorada en el orificio de disparo

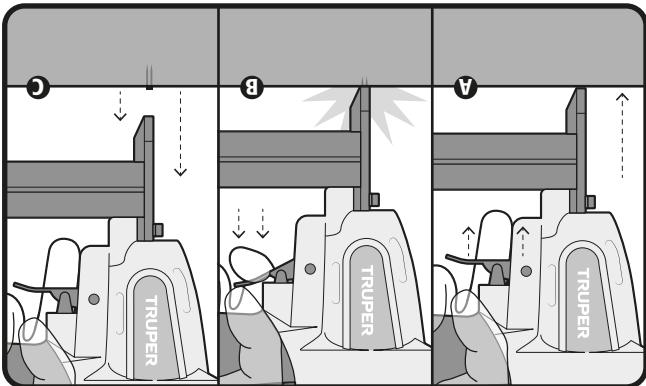

Bloduear el gatillo de la herramienta.

ADVERTENCIA Recuerde de no excederse de 110 PSI (780 kPa).

- Una sola posibilidad de elegir la alternativa correcta.
 - Necesita una respuesta correcta para obtener el resultado deseado.
 - Se evalúa la habilidad y conocimientos del estudiante.

- Inmediatamente suelta el gatillo y levanta la herramienta (C).

- A) ATENCIÓN** • Se recomienda usar una pieza de madera de desecho para verificar el correcto funcionamiento de la herramienta.

 - Con los dedos sin tocar el gatillo posicione la herramienta y presione la boquilla contra la superficie a rebajar (**A**). Libere la palanca de bloqueo para permitir el accionamiento del gatillo.
 - Si la pieza se mueve o se desplaza la herramienta no tiene precisión (**B**).

- Cargue el cartucho como se indica en la página 7.


ADVERTENCIA La herramienta opera a rango de presión, de operarse a rangos mayores de presión la

- Encienda el compresor de aire y permita que se llene.
 - Regule la presión de salida del compresor de aire de 75 PSI y 110 PSI (517 Kpa y 758 Kpa).

Operación

Puesta en marcha

TRUPER®

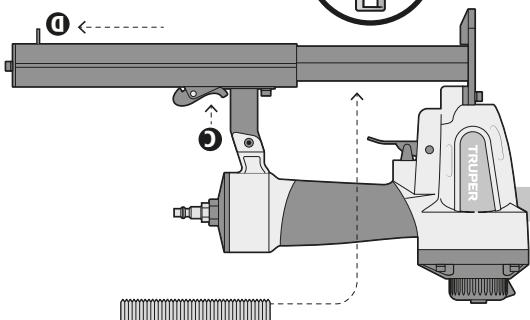

con el seguro del cartucho.

• Cierre el cartucho empujando la cubierta y bloquee la cubierta con los dedos.

A TENCION Asegúrese de que las grapas no estén sueltas o dañadas.

• Coloque las grapas sobre la costilla del cartucho con los puntales hacia abajo. **C Y JALANDO HACIA ARRIBA** (D).

• Abra el cartucho para grapas presionando el seguro del cartucho.

• Levante el cartucho que no haya grapas atoradas en el cartucho.

• Desconecte la manguera de aire de la herramienta.

Caraga del cartucho

Rápidamente las herramientas se intercambiarán fácilmente.

• El copel rápido es útil para conectar y desconectar.

• La manguera a la herramienta asegurarse de que el cartucho para grapas es encuadrado vacío.

A TENCION Ajuste de conexión del copel rápido (B).

• Conecte la manguera de aire a la herramienta por medio del copel rápido (B).

• Conecte la manguera dentro de la entrada de aire (A).

• Si la pieza 3, aplique una gota de aceite para herramientas dentro de la entrada de aire (A).


• Si no dispone de un filtro-aerógrafo como el recomendado en la pieza 3, aplique una gota de aceite para ambos este en limpios antes de conectarla a la herramienta.

• Si el mango y el copel rápido para voltear que de aire por la manguera al compresor y déle correr un poco

• Conecte la manguera al compresor y déle correr un poco

Conexión de la toma de aire

Preparación

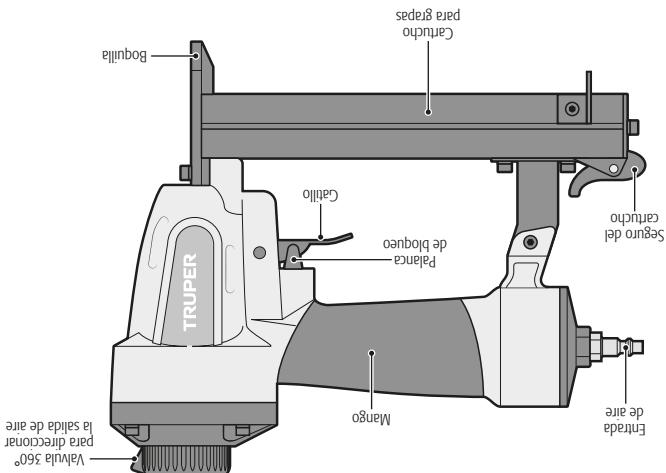

Después de utilizar la engrapadora

- Desconecte la herramienta de suministro de aire antes de realizar cualquier labor de mantenimiento o desatascos.
 - Cambiar la herramienta de lúgar, si plena energía eléctrica a otra persona.

Mientras utiliza la engrapadora


- Es necesario que tanto el operador como cualquier otra persona en el área de trabajo usan lentes de seguridad con protecciones laterales, así como cascos protectores que cumplian con los estándares de la Norma Oficial Mexicana (NOM), para evitar posibles lesiones.
 - Review de este tipo de la herramienta. Nunca la opere si el segunto, el gatillo o los muellies son inoperantes, se encuentran dañados o han sido extraídos. No realice modificaciones alguna al seguro, el gatillo o los muellies.

Antes de utilizar la engrapadora

para uso de engrapadoras neumáticas

Advertencias de seguridad

TRUPER®

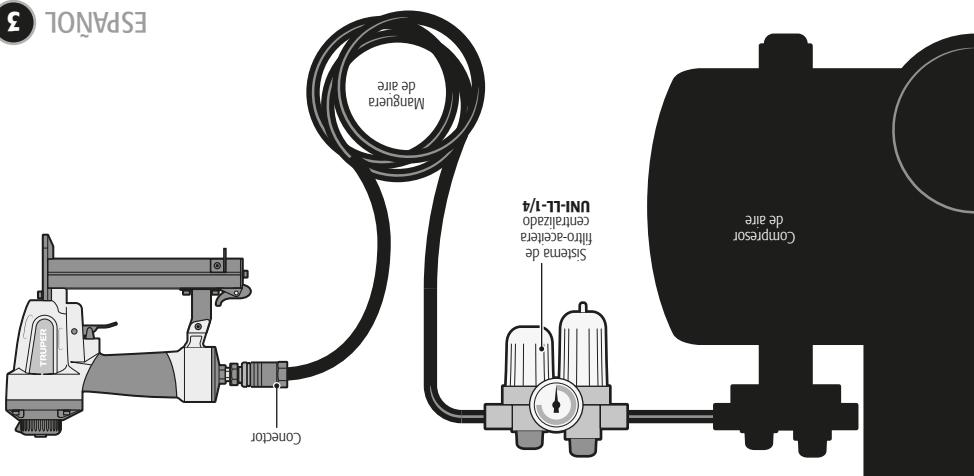

Consulte el instructivo del compresor.

- Drene el agua del tanque del compresor de aire así como la condensación de las mangüeras antes de usar la herramienta.
- El sistema de filtro-acelerador debe regularse para que administre de 3 a 6 galas por minuto.

Si goteo continuamente la caída del aire que resiste el operador.

- **T-RUPE.** Este sistema asegura la lubricación reducida el consumo de aceite en un 80%, lo que incrementa significativamente la herramienta. Se recomienda la lubricación de un sistema de filtro-acelerador centralizado **UN-NL-1/4** marca polegariles de la herramienta. Si goteo continuamente la caída del aire que resiste el operador.

A ATENCIÓN El polvo, agua y la faja de aceite específico para herramientas neumáticas son la causa principal de las fallas

Reducirán los de filtrado y lubricación

comprenderá el uso de mangüeras muy largas (más de 8 metros). El diámetro interno mínimo de la mangüera debe ser de $\frac{3}{8}$ " (9,5 mm) y los conectores deben ser de $1/4$ NPT. Use cables y accesorios de buena calidad y del tamaño adecuado.

A ATENCIÓN Se debe considerar el aumento en la presión de línea o el diámetro interno de la mangüera para


Diametro interno de la mangüera	• $\frac{3}{8}$ " (9,5 mm)
Conexión de entrada de aire	• $1/4$ NPT
Largo de grapa	• $\frac{1}{4}$ " (6,5 mm) a $\frac{5}{8}$ " (16 mm)
Ancho de grapa	• $\frac{3}{8}"$ (9,5 mm)
Calibre de grapa	• 22 (0,7 mm)
Capacidad del cartucho	• 100 grapas
Máxima presión permisible	• 110 PSI (758 kPa)
Presión de operación recomendada	• 75 PSI (517 kPa) - 110 PSI (758 kPa)
Descripción	• Engrapadora neumática
Código	• 13177

ENNE-70

T-RUPE®

Especificaciones técnicas

Δ Realice MANTENIMIENTO periódico a su máquina (página 9)

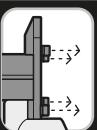

Δ Trabaje a la PRESIÓN INDICADA para evitar que las grapas se atasquen. En caso de que esto suceda RETIRE LA GRAPA antes de seguir trabajando.



Δ Utilice solo en MADERA.



Δ No opere sin lubrificar (se recomienda usar el filtro lubrificante 19238 UNI-LL-1/4).

RECOMENDACIONES DE USO Y CUIDADOS

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

Guarde este instructivo para futuras referencias. Los gráficos de este instructivo son para referencia, pueden variar del spéctro real de referencia.

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del spéctro real de referencia.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del spéctro real de referencia.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del spéctro real de referencia.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del spéctro real de referencia.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del spéctro real de referencia.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del spéctro real de referencia.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del spéctro real de referencia.

ATENCIÓN

Indice

TRUPER®

- 12 Poliza de garantía
- 11 Centros de servicio autorizados
- 10 Notas
- 9 Solución de problemas
- 8 Mantenimiento
- 8 Puesta en marcha
- 7 Preparación
- 7 Partes
- 6 Advertencias de seguridad
- 5 Control de riesgos
- 4 Advertencias generales de seguridad
- 3 Requerimientos de filtro y lubricación
- 3 Especificaciones técnicas




Lea este instructivo por completo.
Antes de usar la herramienta.



ATENCIÓN

ADVERTENCIA Lubricación constante.

ENNE-70

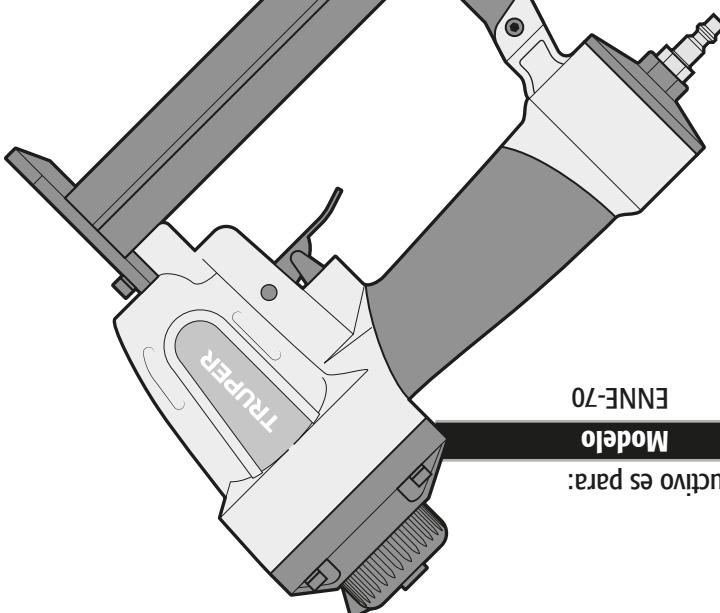

13177 ENNE-70

Código de modelo

Este instructivo es para:

Engrapadora neumática

Instructivo de

TRUPER®

ESPAÑOL
ENGLISH